


Not all wire mesh systems are created equal. On the 7th day SpaceGuard created the Growth Plate...

These punched 1-1/4" x 2" x 1-1/4" channels have been provided for the following (refer to your drawings):




Bolt in line between panels & posts or at wall ends:



Bolt to non-lock side of slide doors to create overlap w/ post:



Bolt to panels in ceilings to offset post growth:

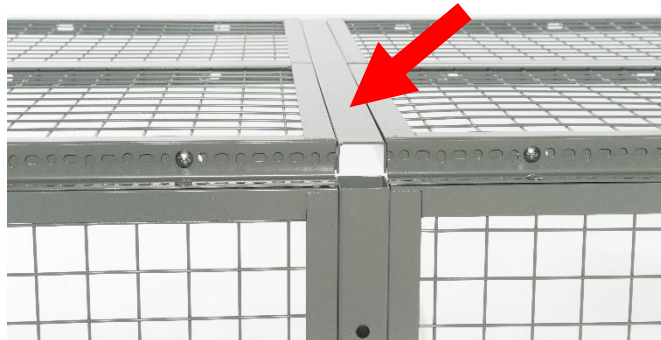

Bolt below panels to eliminate standard sweep space:

